


安装说明书

Installation manual

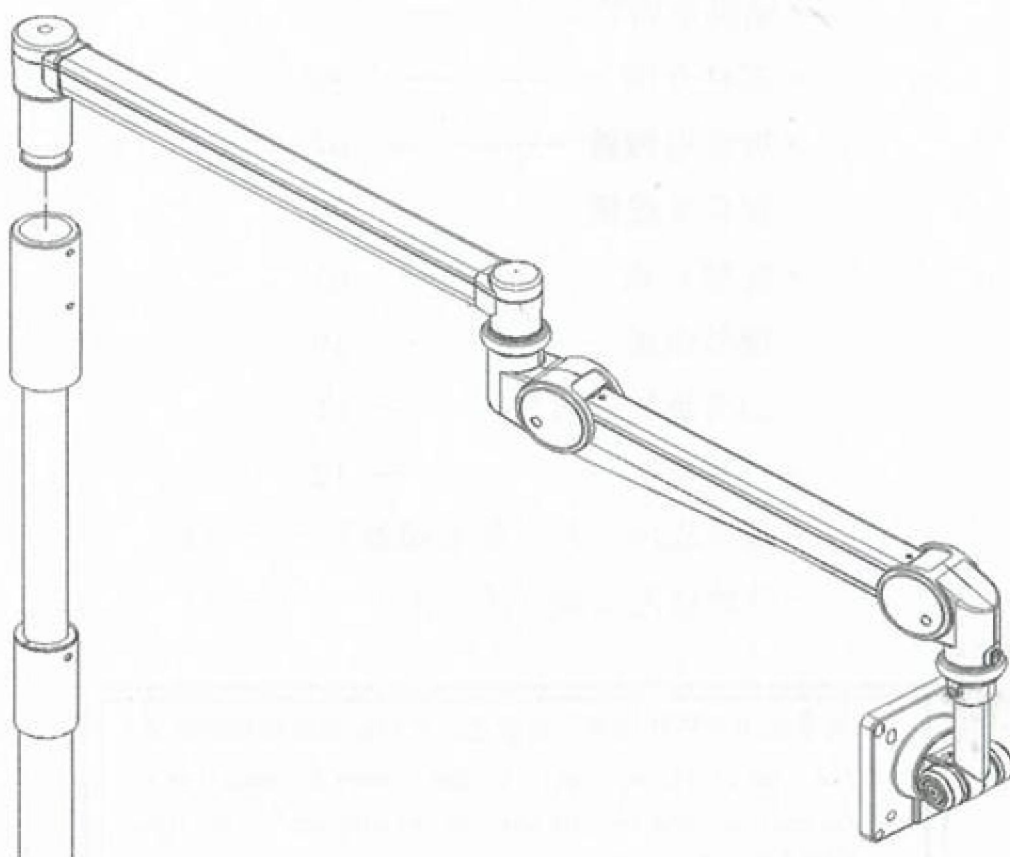

开始装配前

请仔细阅读这个安装指南，按照步骤进行组装。

检查包装中的所有配件。

如果有配件缺失，请联系供货商。

目录：


- 配件清单 ----- 02
- 安装图示 ----- 03
- 支架安装 ----- 04
- 俯仰角调节 ----- 05
- 部件介绍 ----- 06
- 拆装电线盖 ----- 07
- 设备穿线图 ----- 08
- 安装终端 ----- 09
- 调节承重 ----- 10
- 调节旋转舒适度 ----- 11
- 挡片拆装 ----- 12
- 落地底座安装（膨胀螺丝）----- 13
- 落地底座安装（床头柜）----- 14



安装应由合格的技术人员负责，并符合当地法规的要求。



The installation should be pereormed by aqualfied technician and should meet therequirements of local regulations.

配件清单

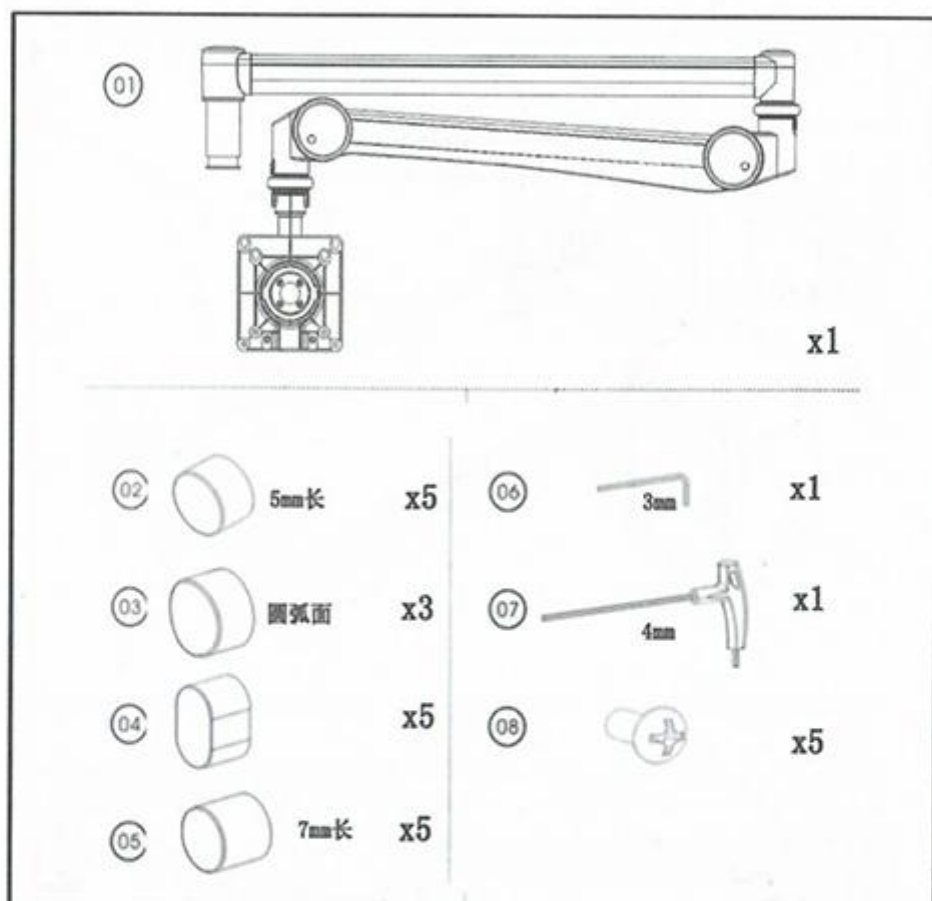



安装图示

Installation diagram

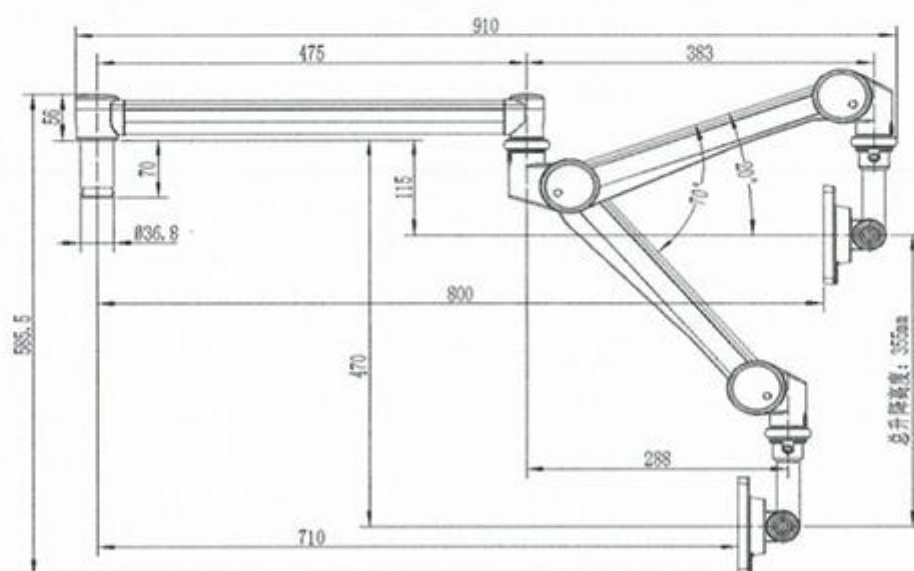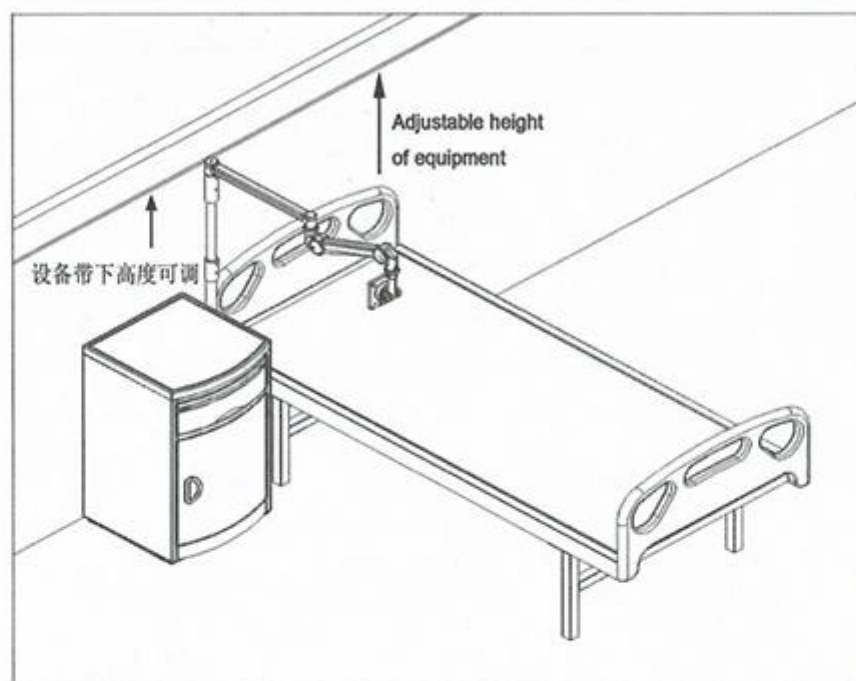


支架安装

Bracket installation

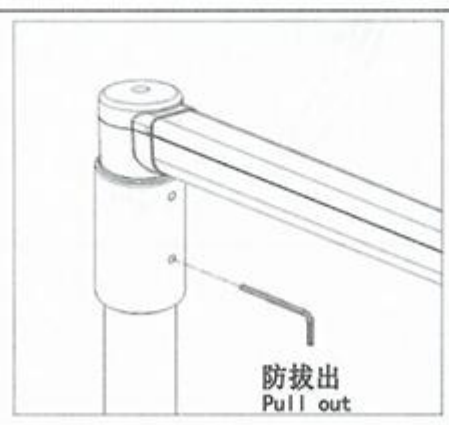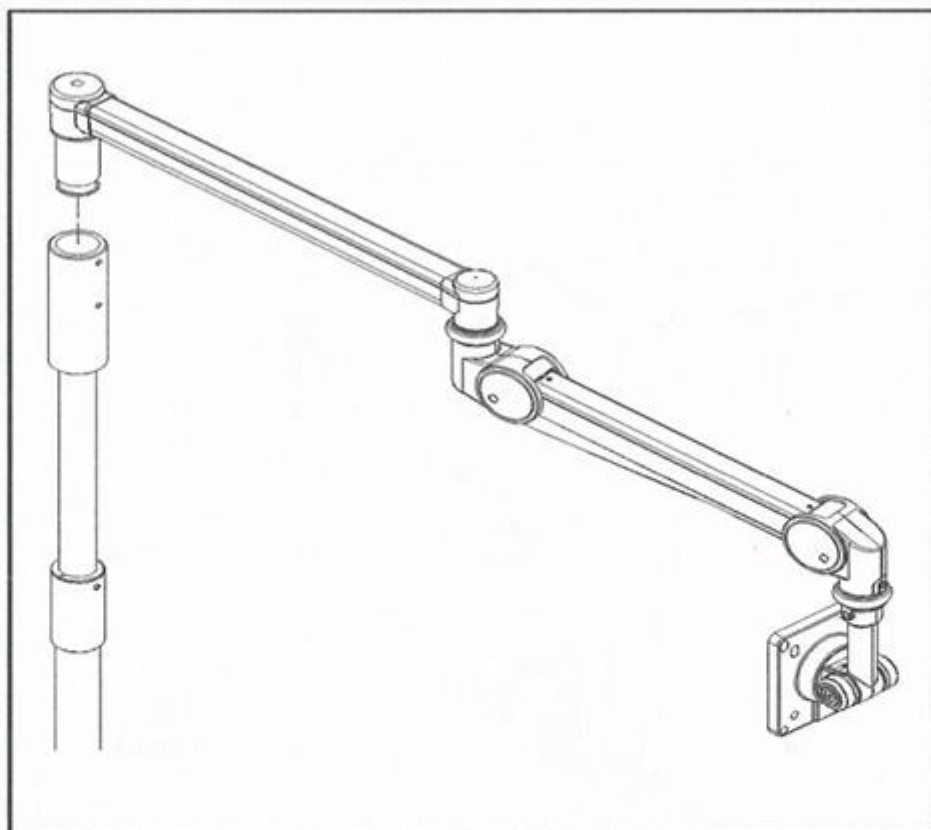


俯仰角调节 Pitching angle adjustment

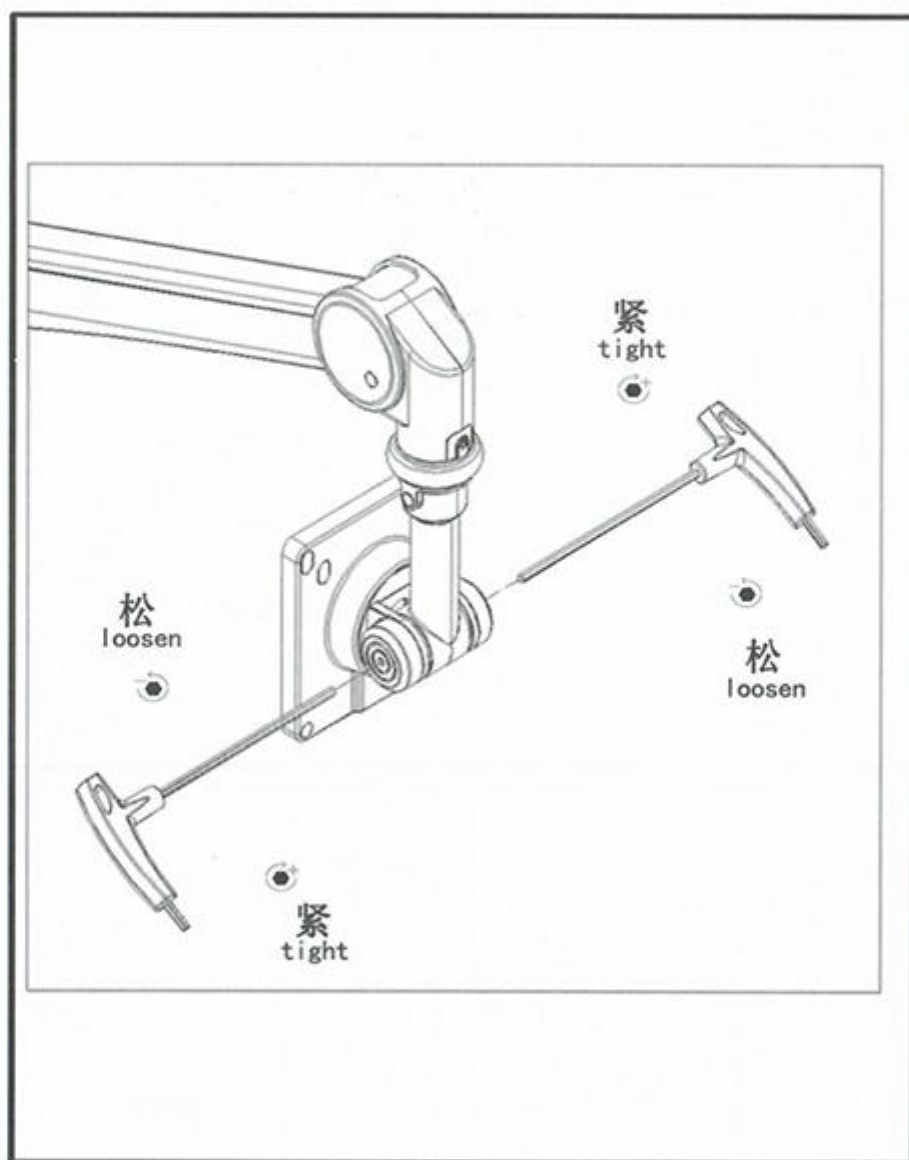


塑料外盖爆炸图

Plastic cover explosion diagram

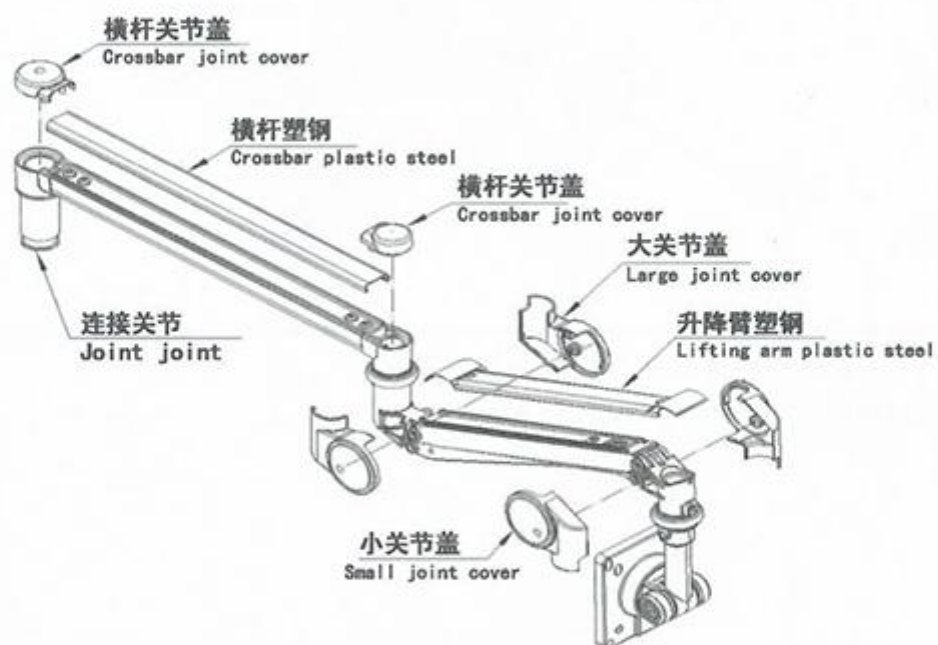


拆装电线盖 Disassemble the cover of the wire

按数字编号顺序箭头方向拆开塑料盖
Disassemble according to numbered order

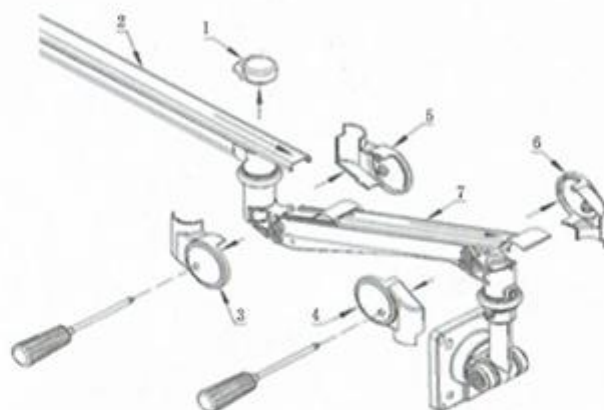

按数字编号顺序箭头方向装上塑料盖
Install in numeric numbered order.

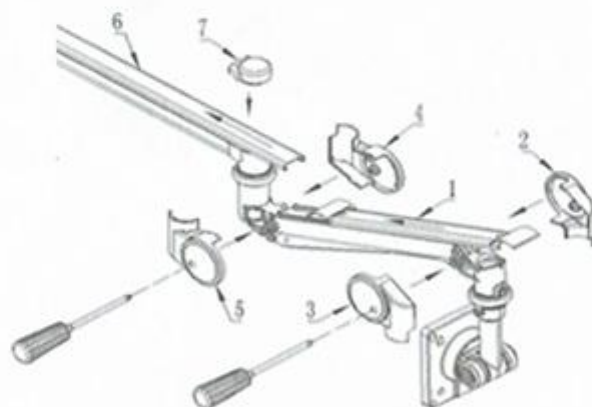


设备穿线图

Line drawing of equipment

支架内部穿线线长1.6米，根据实际情况增加线头长度。

The internal threading length is 1.6 meters, and the length is increased according to the actual situation.


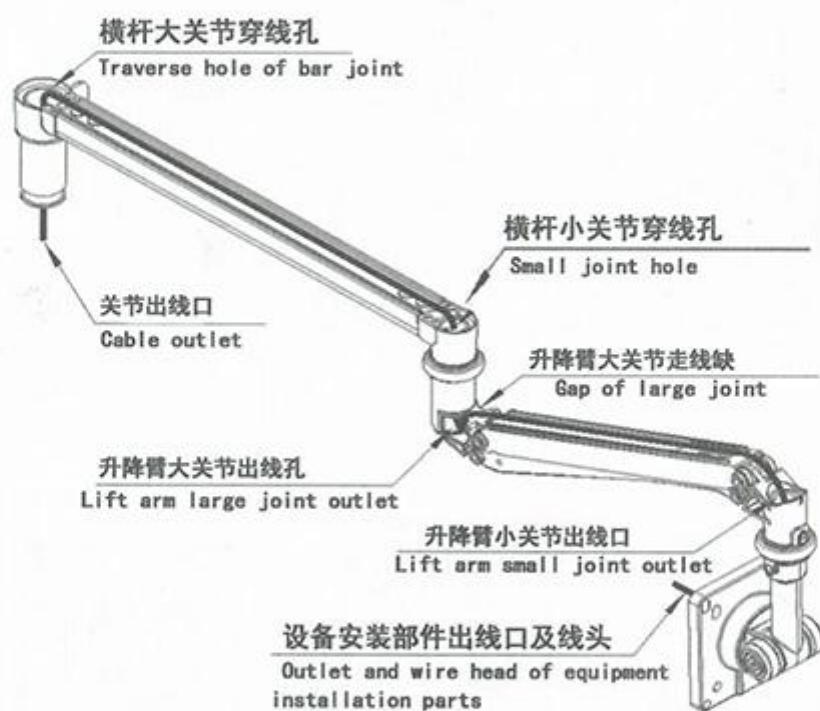


安装终端

Installation terminal

用螺丝刀安装显示器

Mounting a display with a screwdriver.

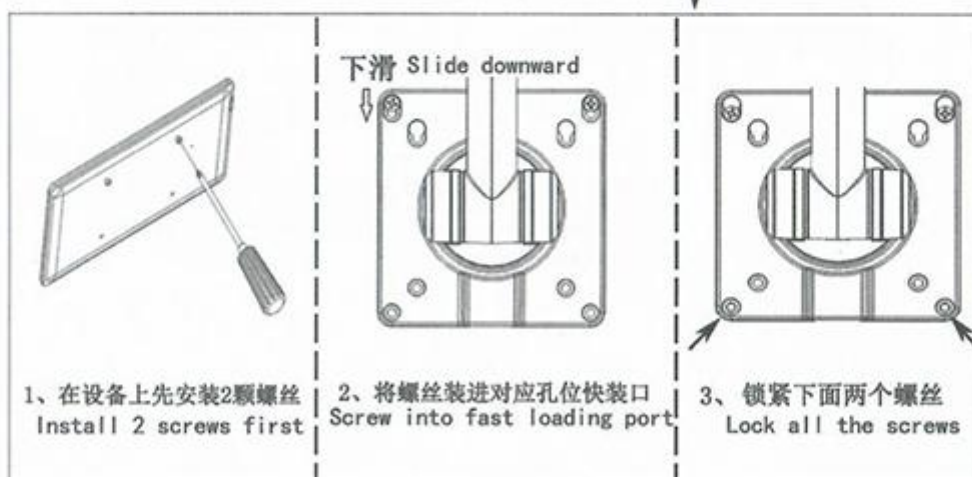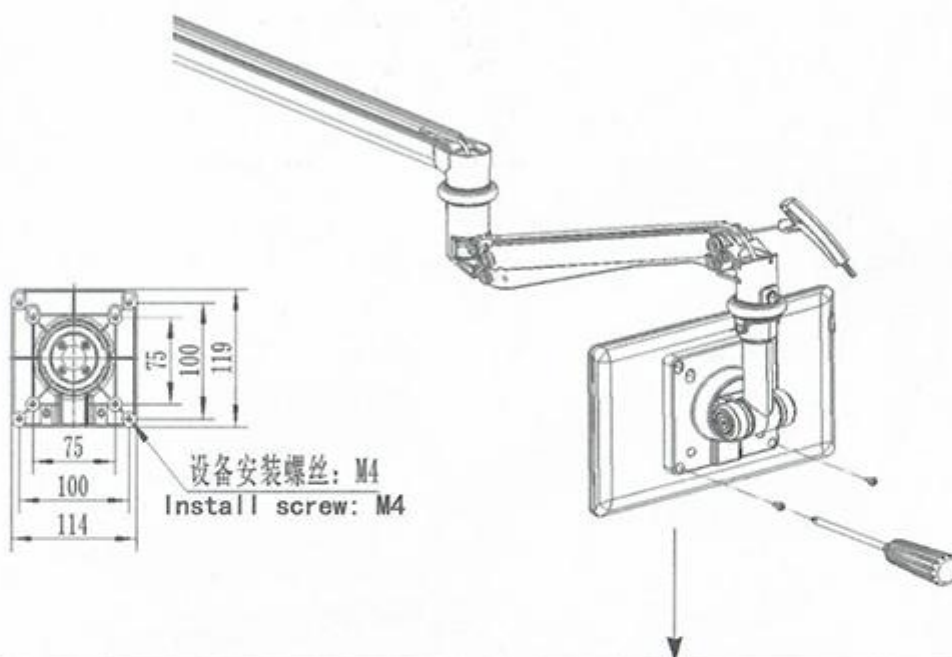

调节承重

Adjusting load bearing

谨慎调节承重：

Careful adjustment of load bearing

承重范围：5kg

Loading : 5kg

请确保您已了解所挂设备的重量

Make sure that you know the weight of the equipment hanging.

调节 (Regulation) :


使用内六角把手调节承重：

Use internal six corner handle to adjust bearing capacity.

顺时针 (+) 增加承重，逆时针 (-) 减少承重。

Clockwise (+) increases load-bearing and-

counterclockwise (-) reduces load-bearing capacity.

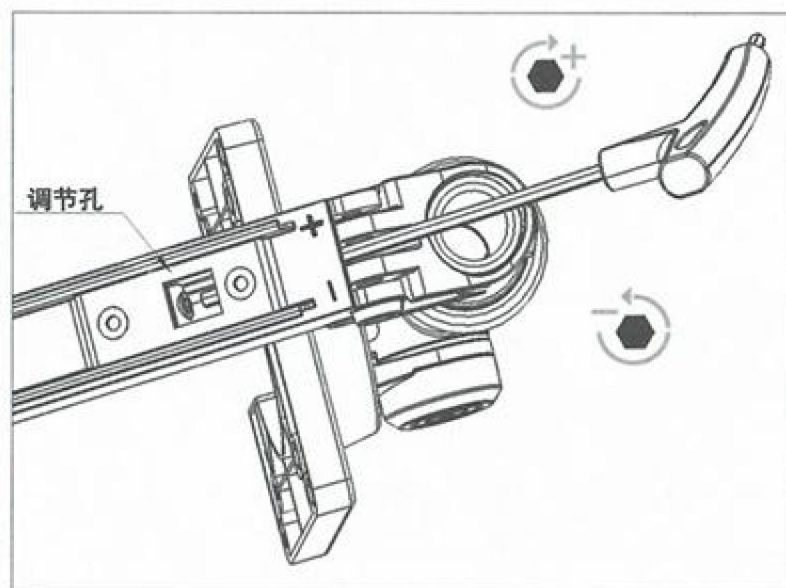


调节旋转舒适度

Adjustment of rotation comfort

用3mm六角把手调节壁挂式手臂松紧，让手臂可以旋转。

Use the 3mm six knob to adjust the wall hanging arm to relax the screw so that the arm can be rotated.

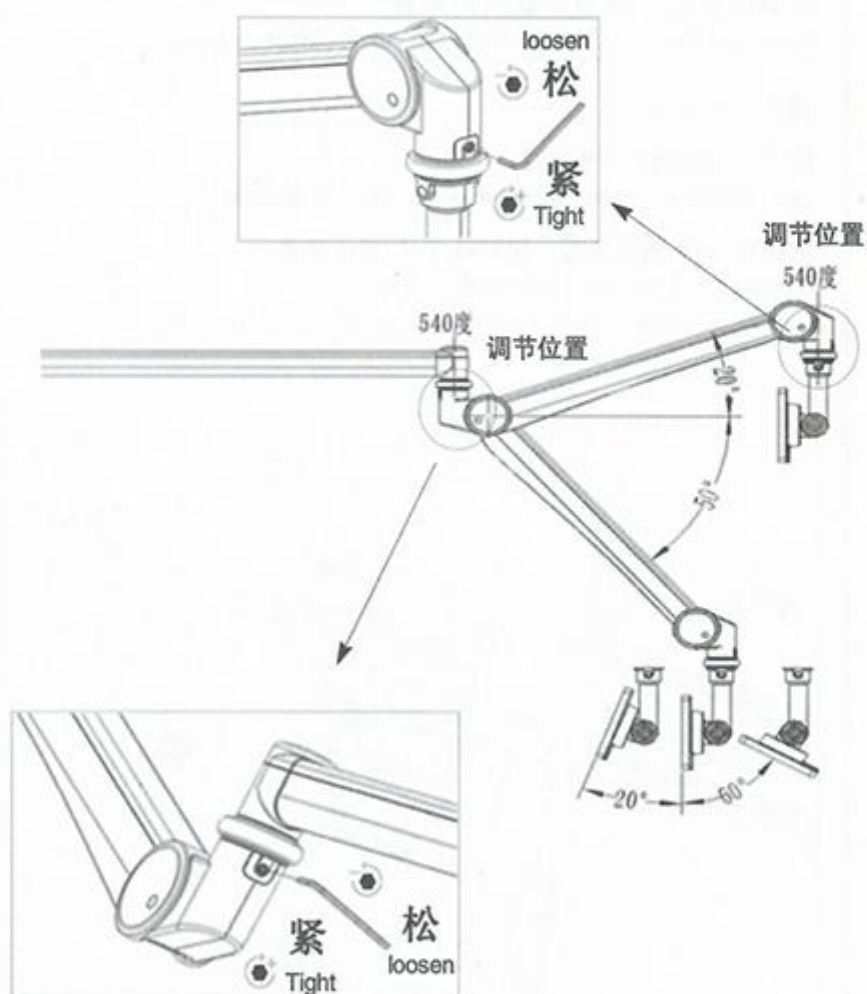


挡片拆装

Block slice disassembling


按照下图的方法安装

Install it in the following digram.

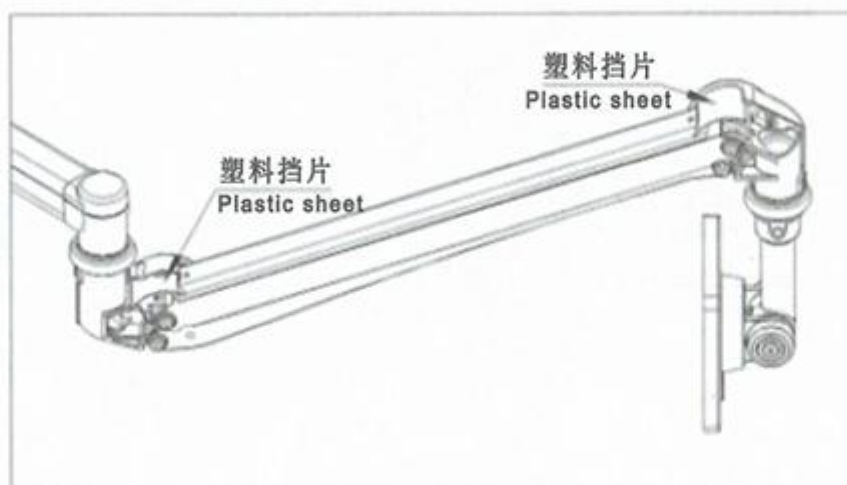


塑料挡片要安装在槽上。


The plastic sheet is to be installed in the slot.

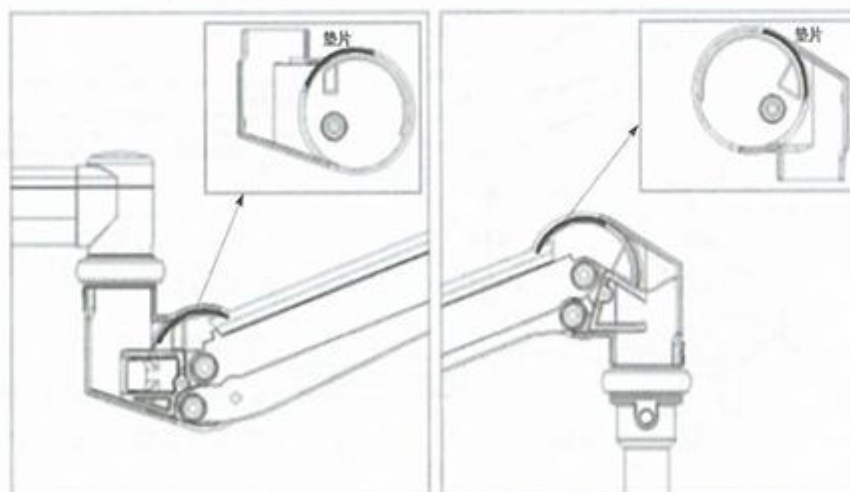

落地底座安装（膨胀螺丝） Install base (expansion screw)

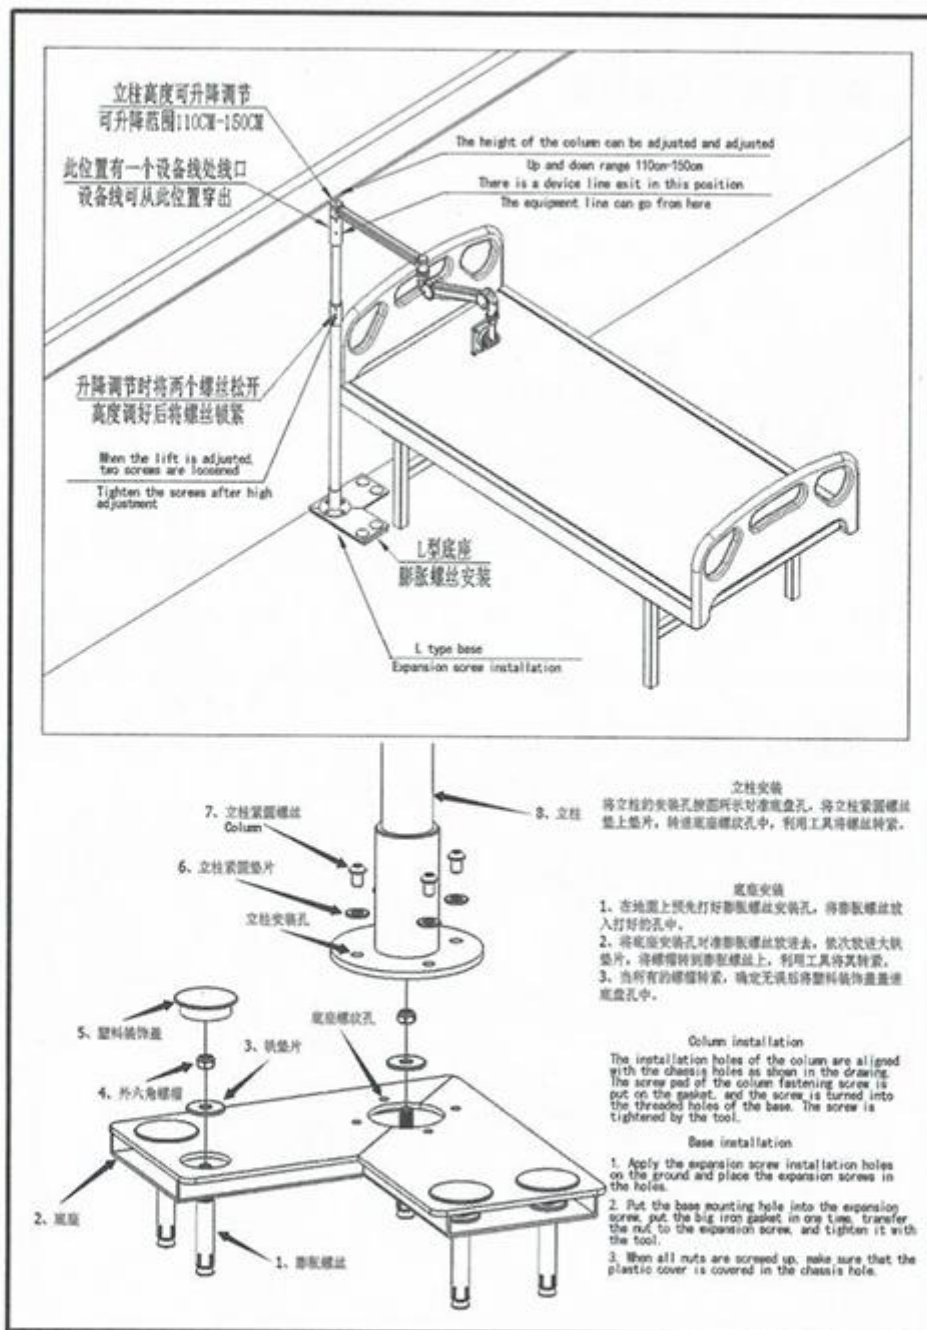


落地底座安装（床头柜） Landing bedside cabinet installayion

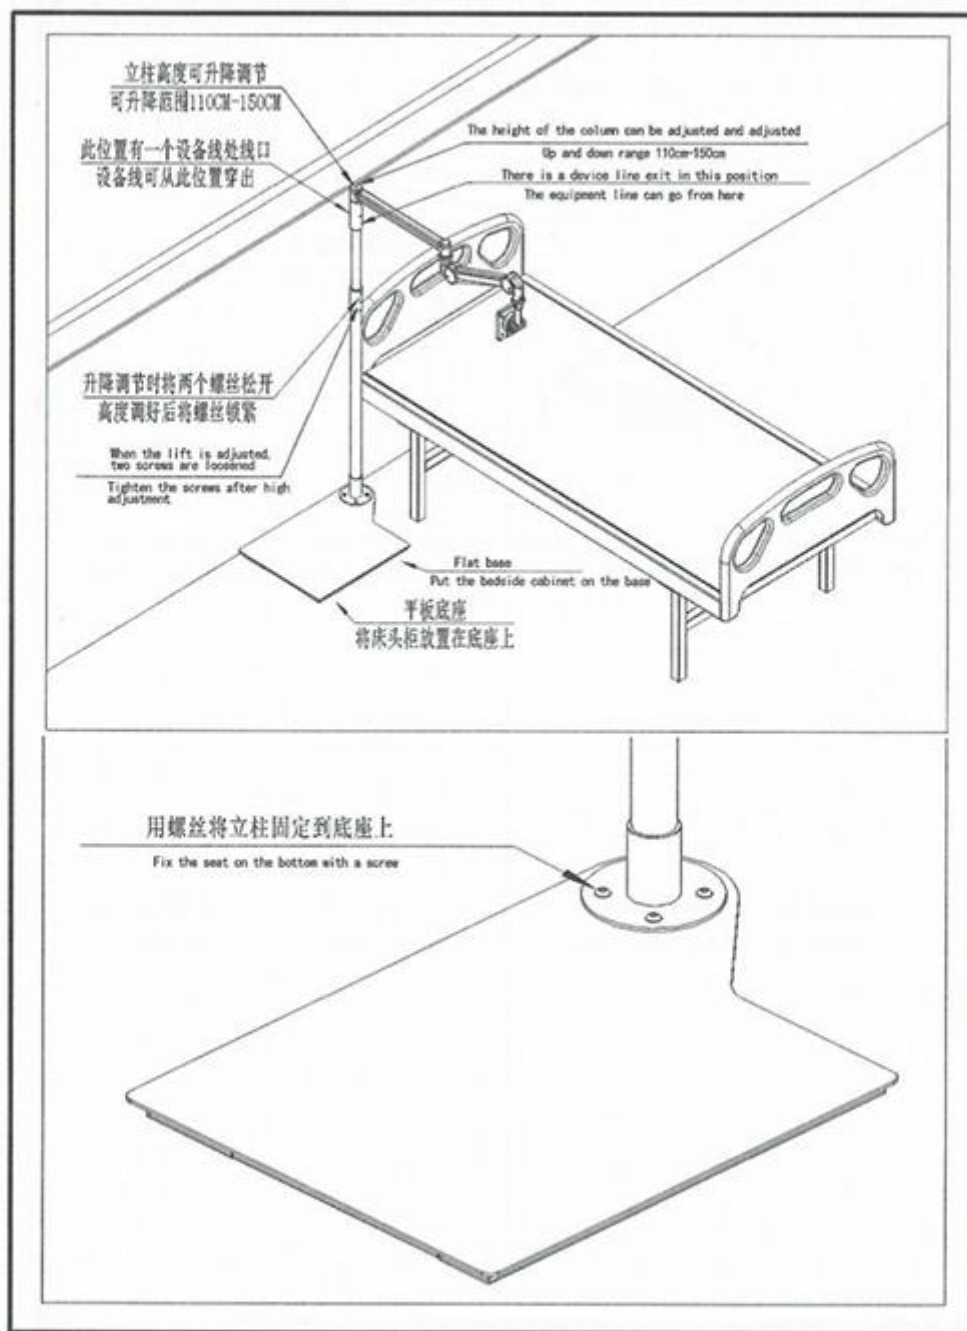

安全须知 Safety Notes

- 1、组装后请勿拆卸。
Do not disassemble after assembly.
- 2、请勿让小孩单独使用支臂。
Do not allow children to use their arms alone.

⊘ 请勿大力拉扯
Please do not pull hard.

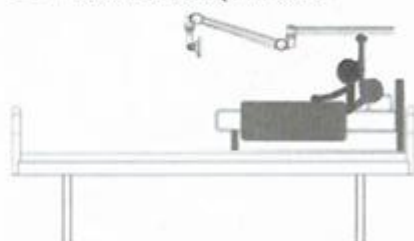


⊘ 请勿攀爬摇摆
Do not climb and swing.




⊘ 不要在支架上挂东西
Don't hang anything on the bracket.



⊘ 禁止拉扯、摇晃 No pulling or shaking.

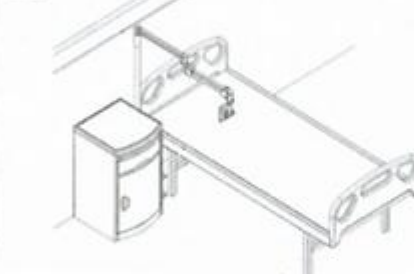

禁止设备超出承重范围！
Prohibit equipment beyond load bearing range!

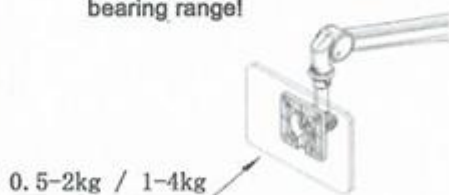

请保证所安装设备尺寸和重量在支架承重范围内
Please ensure that the size and weight of the installed equipment are within the scope of the support bracket.

适配安装孔距：75*75mm / 100*100mm
Installation distance: 75*75mm / 100*100mm



设备安装螺丝：M4
Screw diameter: M4